

## 9. Access control management

Touch the screen and a menu bar will pop up on the right side of the screen, click > 【Access】

### 1. Access

Item	Meaning
OD delay	Set the time between lock relay effective and the state of resume normal.
Sensor Delay	When door status is opposite to sensor mode and keep this status for more than sensor delay, device will alarm
Wg output	Define the content of wiegand output, user ID and card number can be selected
Wg format	You can define wiegand port output format. The default format is 34bits, and it can be changed to 26bits

### 2. Timezone settings

#### 2.1 Day timezone

According to the rules and regulations of user's entry and exit, set the daily access time to the corresponding time period. You can totally set 8 groups of day time zones, or week time zones. For example, you can set the time between 6:00am and 8:00am to open the door, and the time between 17:00pm and 19:00pm to open the door. Pls refer to below picture Day Timezone 1 setting. If you want to set the door to be open in all day, pls refer to below picture Day Timezone 2 setting.

Example: 【Day Timezone 1】 setting as below

T.Zone1	06 : 00	08 : 00
T.Zone2	17 : 00	19 : 00
T.Zone3	00 : 00	00 : 00
T.Zone4	00 : 00	00 : 00
T.Zone5	00 : 00	00 : 00

Example: 【Day Timezone 2】 setting as below

T.Zone1	00 : 00	23 : 59
T.Zone2	00 : 00	00 : 00
T.Zone3	00 : 00	00 : 00
T.Zone4	00 : 00	00 : 00
T.Zone5	00 : 00	00 : 00

#### 2.2 Week timezone

According to the rules and regulations of user's entry and exit, Set the passage time of each week to the corresponding day time zone. For example, the above-mentioned daily time zone rule(only 6:00am to 8:00am can open the door, and only 17:00pm to 19:00pm can open the door) applies from Monday to Friday, and door can be opened all day on Saturday and Sunday. Pls refer to (Figure 1) for Week Timezone 1:

Week time zone	
MON	1
TUE	1
WED	1
THU	1
FRI	1
SAT	2
SUN	2

(Figure 1)

Normal open time zone	
MON	1
TUE	1
WED	1
THU	1
FRI	1
SAT	1
SUN	1

(Figure 2)

**Remark:** In our device, 【Week Timezone 0】 is default to open the door all day. All other time zones are customizable


#### 2.3 Normal open timezone

According to requirements, Set the passage time of each week to the corresponding day time zone .Example: If the setting is as (Figure 2), Day time 1 applies to every day , then it means the door is kept open between 6:00 am and 8:00 am and 17:00pm to 19:00pm everyday


### 3. Ethernet

< BACK Ethernet	
DHCP	No
IP address	192.168.001.224
Subnet mask	255.255.255.000
Gate way	192.168.001.001
DNS ServerIP	008.008.008.008
MAC Address2e:43:67:28:3a:e2	

Use Ethernet to connect the device to computer, An example is shown in the figure below:

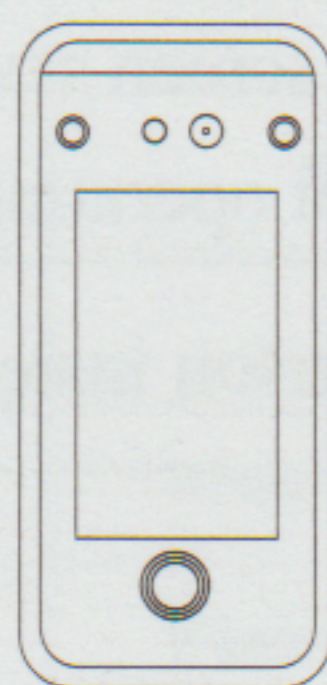

IP Address: 192.168.1.224  
Subnet Mask: 255.255.255.0  
Gateway: 192.168.1.1

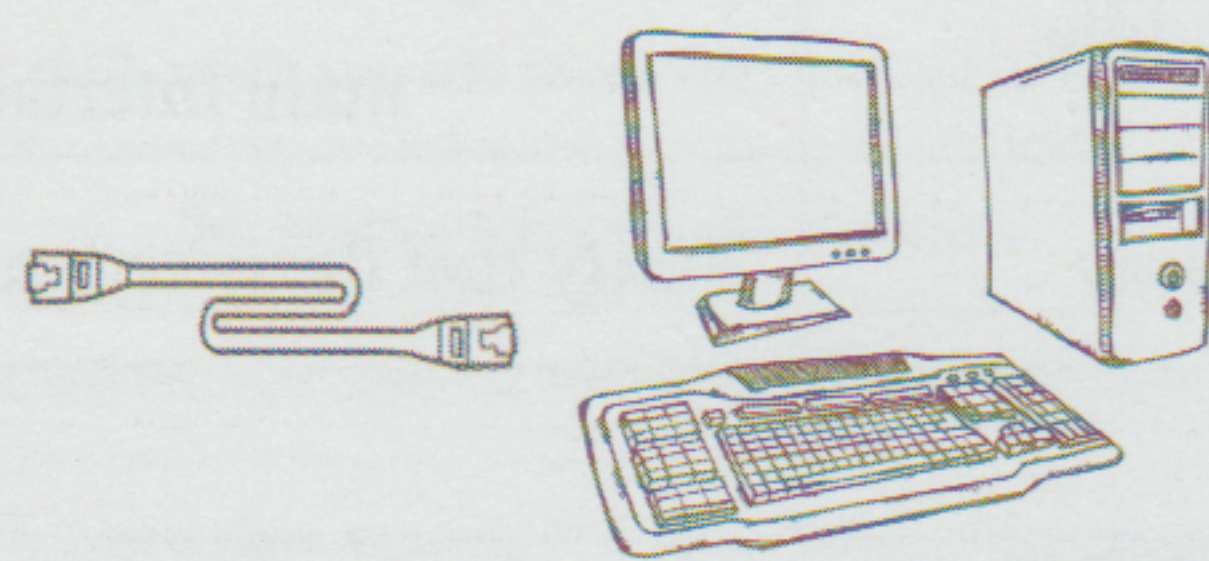

IP Address: 192.168.1.100  
Subnet Mask: 255.255.255.0  
Gateway: 192.168.1.1

### 4. WIFI(Optional)

click 【Search】 to select corresponding wifi hotspot, then input wifi password to connect it.

< BACK WIFI	
Search	GSWIFI-21AD >
DHCP	No
IP address	192.168.001.225
Subnet mask	255.255.255.000
Gate way	192.168.001.001
DNSServerIP	008.008.008.008
MAC Address	38:01:46:18:ab:68

## 12. Schematic Diagram of Access Control Wiring

### 1) Schematic diagram of device wiring port

TCP/IP	TCP/IP interface
--------	------------------


FIRE	Fire in
ALARM-	Alarm-
WG_OUT1	WG output 0
WG_OUT0	WG output 0
WG_IN1	WG input 1
WG_IN0	WG input 0
GND	GND
+12V	+12V

—	—
Bell-	Door bell -
Bell+	Door bell +
D-Sensor	Door sensor
Button	Open signal
Lock_NO	Normal opened end of the control lock signal
Lock_NC	Normal closed end of the control lock signal
Lock_COM	The common end of the control lock signal
GND	GND
+12V	+12V

+12V	+12V
RS485A	RS485A
RS485B	RS485B
GND	GND

### 3. User access settings


Touch the screen and a menu bar will pop up on the right side of the screen, click > **【User Mgt】** > **【User View】** > select users > **【Advanced setup】** to edit T.zone

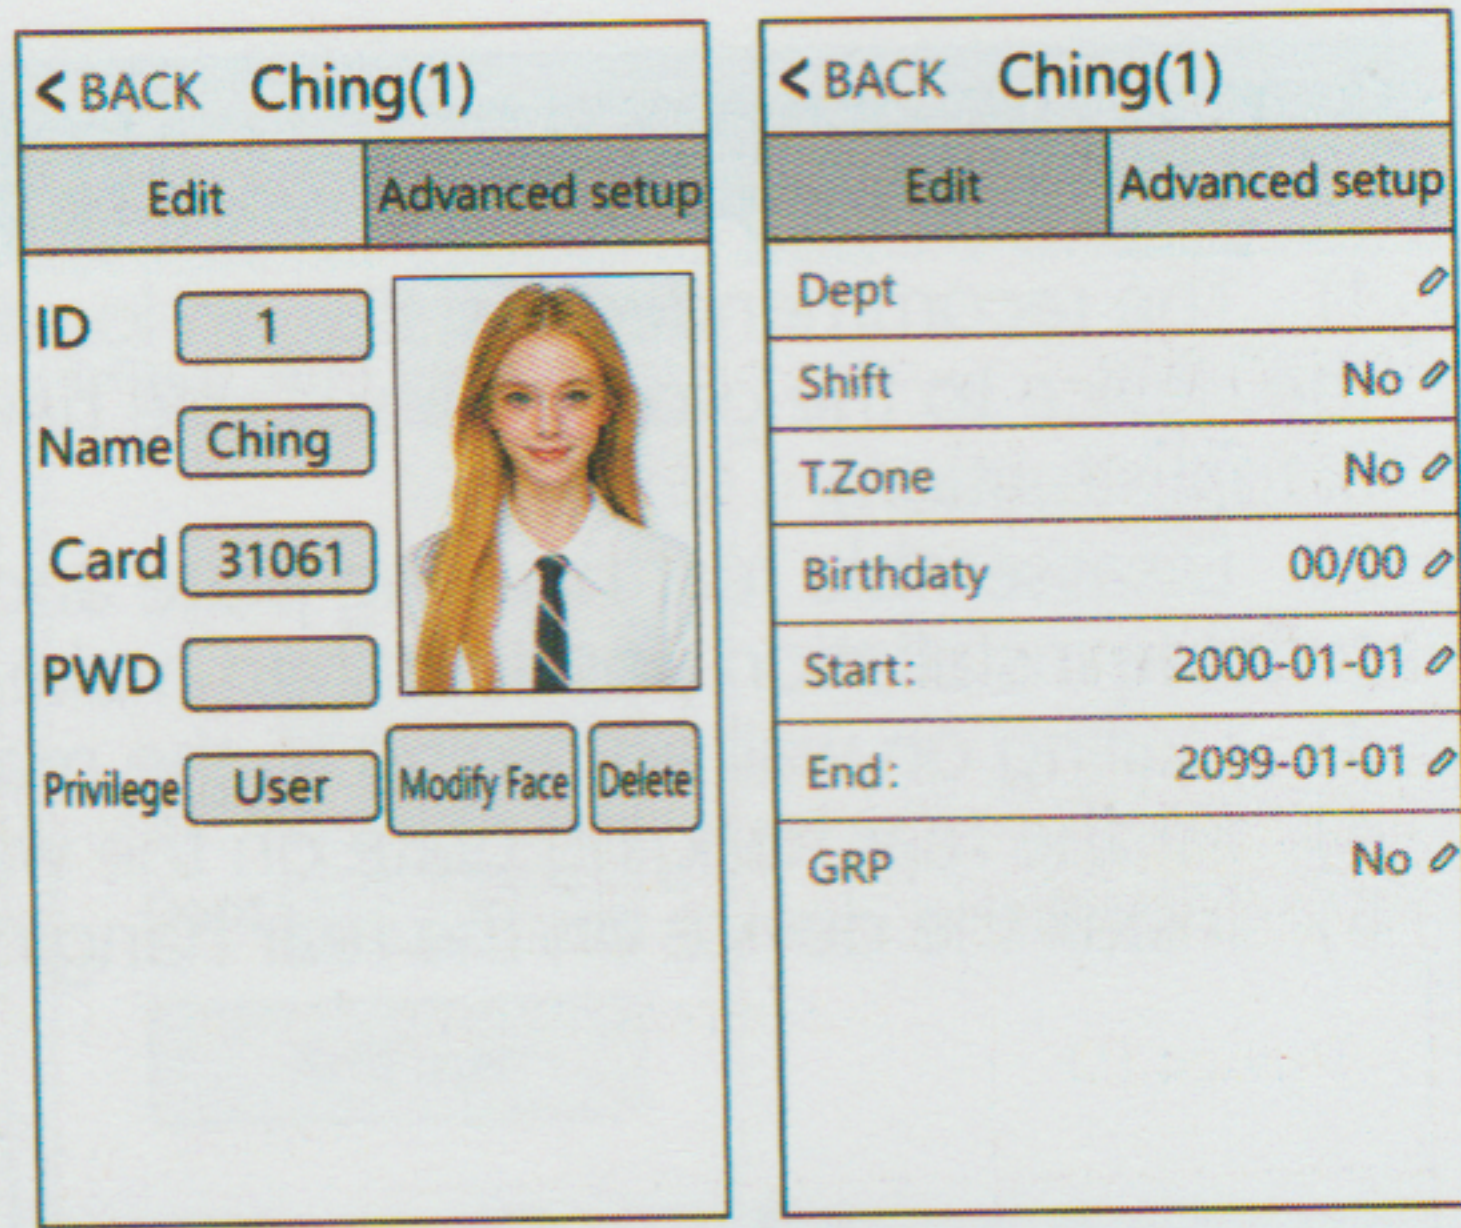

## 10.Data management

Touch the screen and a menu bar will pop up on the right side of the screen, click >

**【Data Mgt】**, Data management consists of 6 modules: Download Glog, Download All Glog, Clear All Enroll, Delete All Glog, Initialize Menu, Clean Manager.

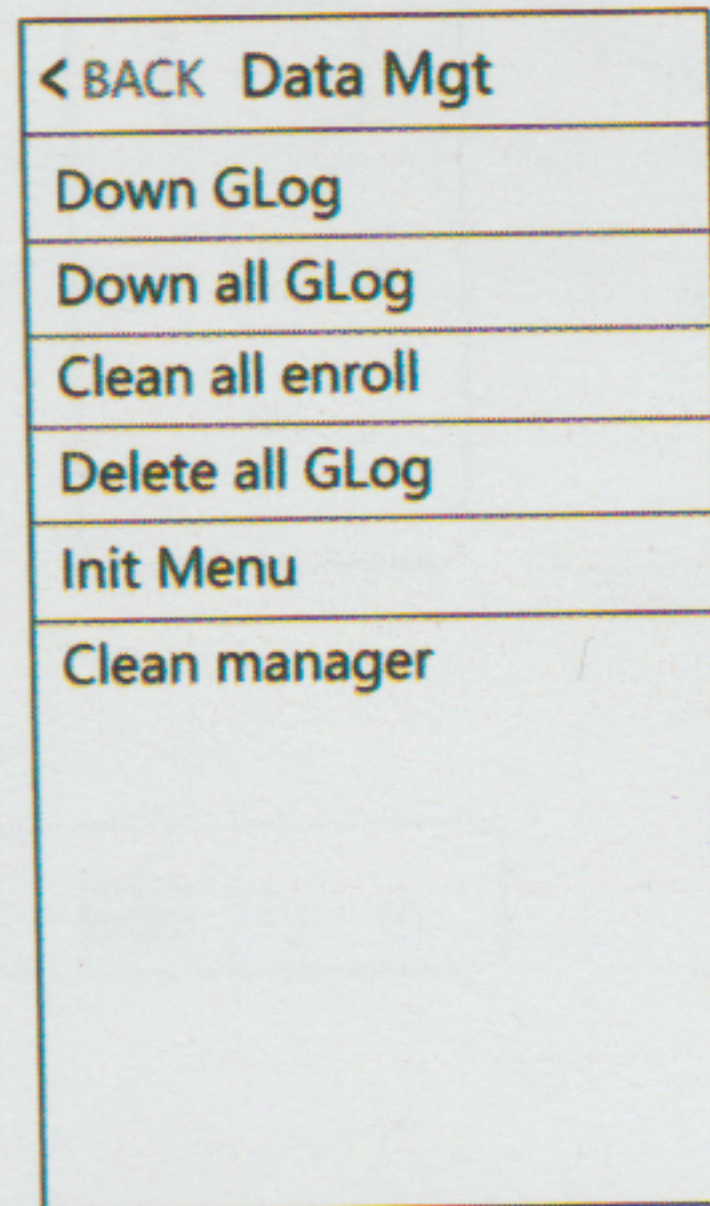

**【Down Glog】**: New attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'GLG\_001.TXT'

**【Down All Glog】**: All attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'AGL\_001.TXT'

**【Clear All Enroll】**: Delete all registration info of all users(include face, card and pwd)

**【Delete All Glog】**: Delete all logs of all users.

**【Initialize Menu】**: Reset device parameter settings, it won't affect user data and records

**【Clean Manager】**: Clear all manager privileges on the device

## 11.Communication

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【Comm set】**

### 1. Comm set


Item	Meaning
Device ID	Set corresponding device No., the default device No. is 1, Please note that the number is related to the communication
Port No.	The default port No. is 5005, For communication connection under LAN
Baud rate	The default value is 38400

### 2. Server

When using WAN connection, please do corresponding server settings

Item	Meaning
Server Req	Select 'Yes' or 'No', select 'yes' to enable server communication
Use domainNm	Select 'Yes' or 'No'
DomainNm	If you select 'Yes' for 'Use domain Nm', enter the server domain name here
Server IP	If you select 'No' for 'Use domain Nm', enter the server ip address here
SerPortNo	Enter server port number
Heartbeat	Default value is 3s
Server approval	If set it to yes, only when device connect to server users can make punch in device


### 2) Device connection diagram

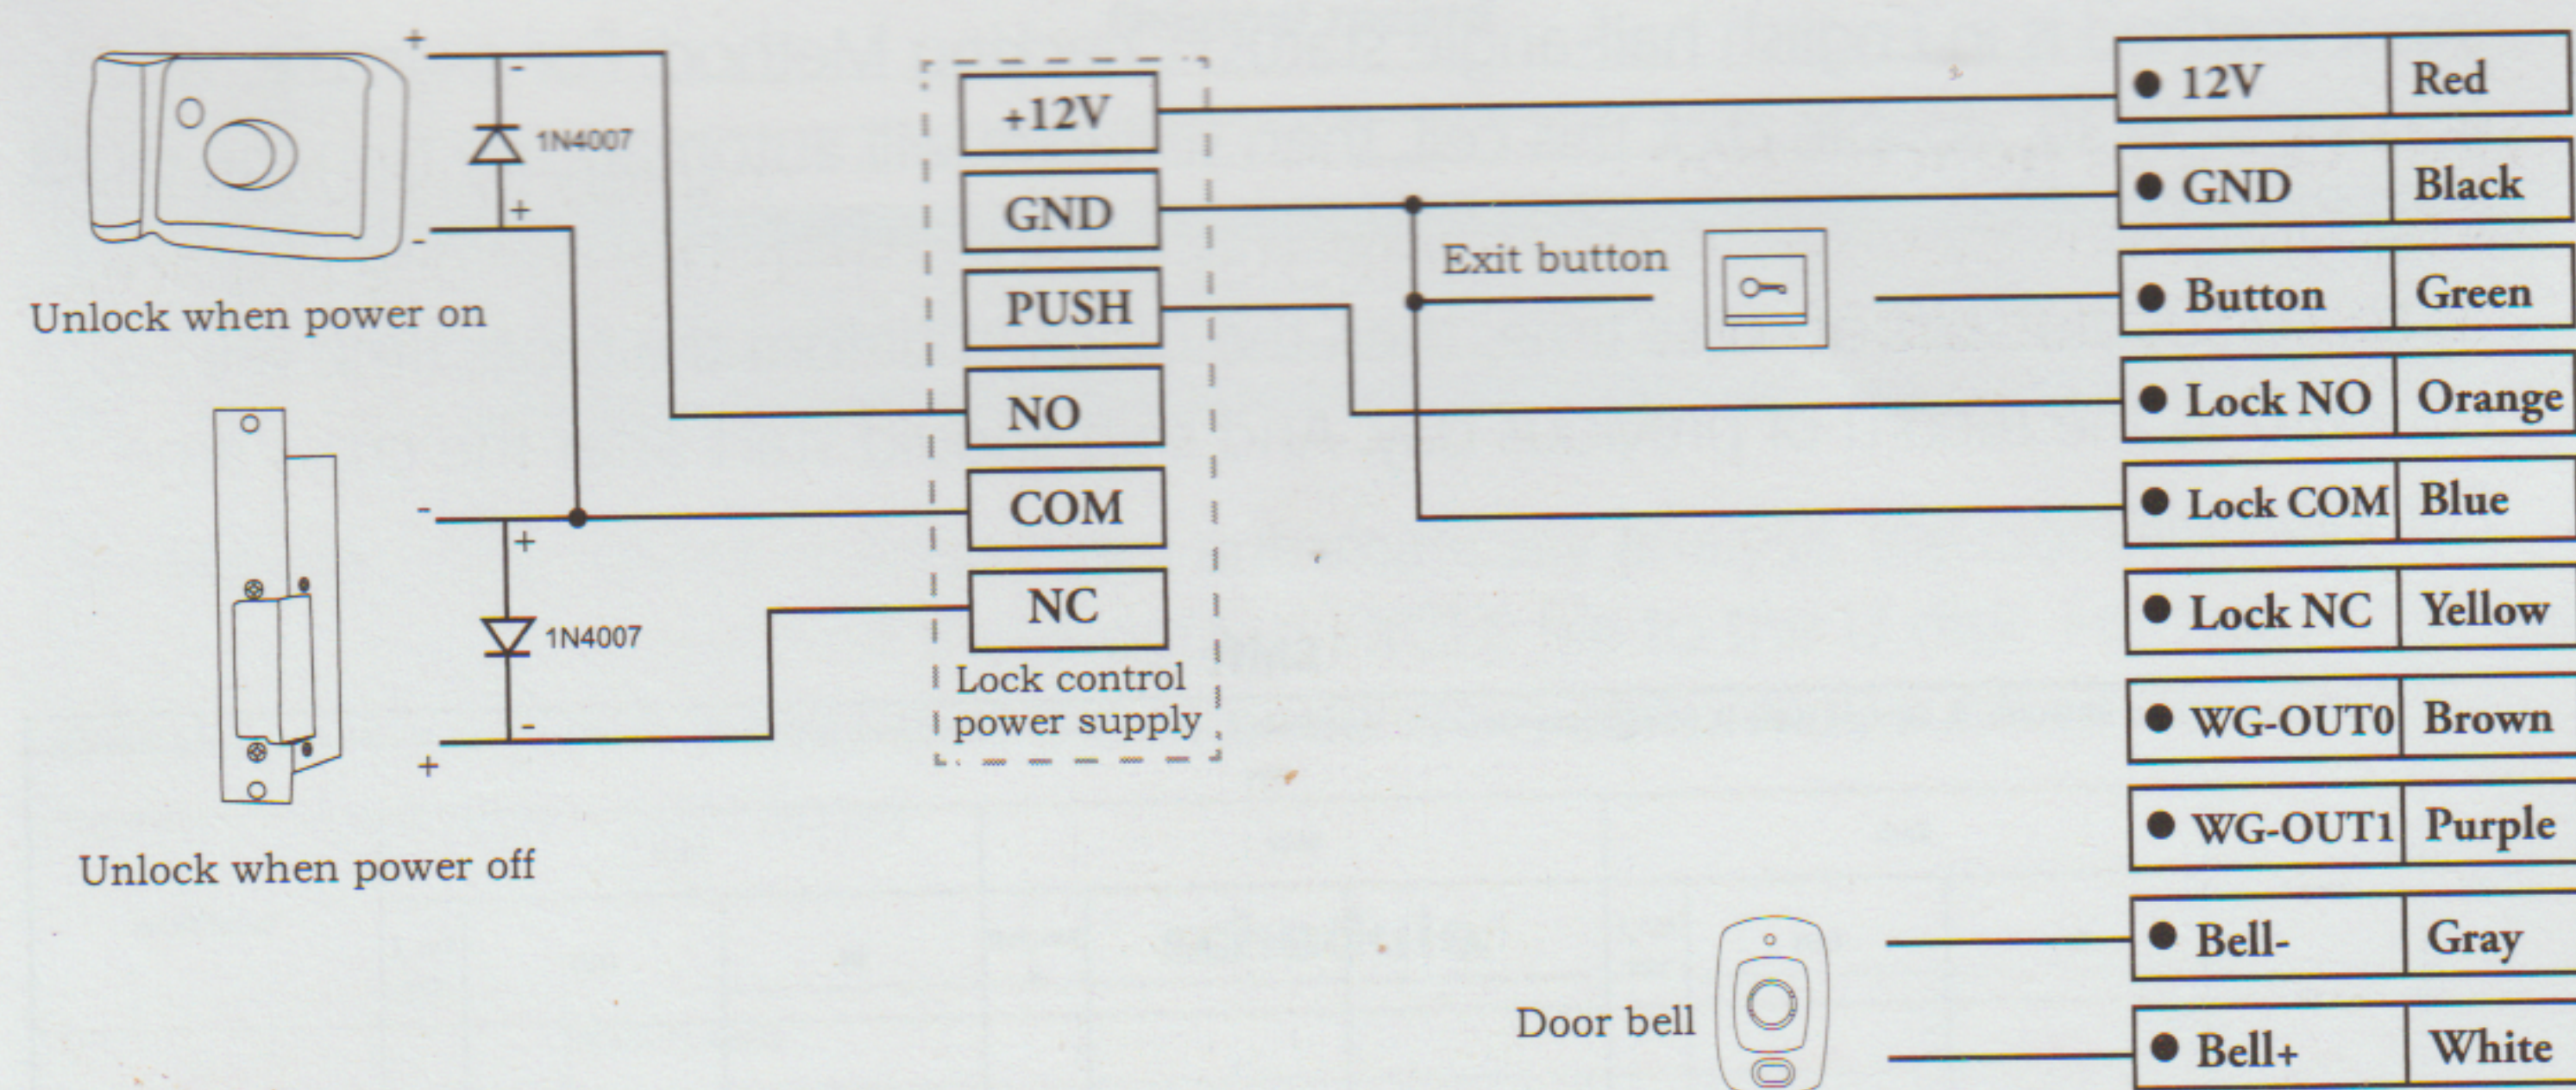

Special Note: To protect the power supply, a diode must be connected across the positive and negative terminals of the electric lock wiring. The end of the diode marked with white should be connected to the positive terminal of the electric lock.

### 3) RS485 connection


Compatible with other RS-485-equipped devices manufactured by our company

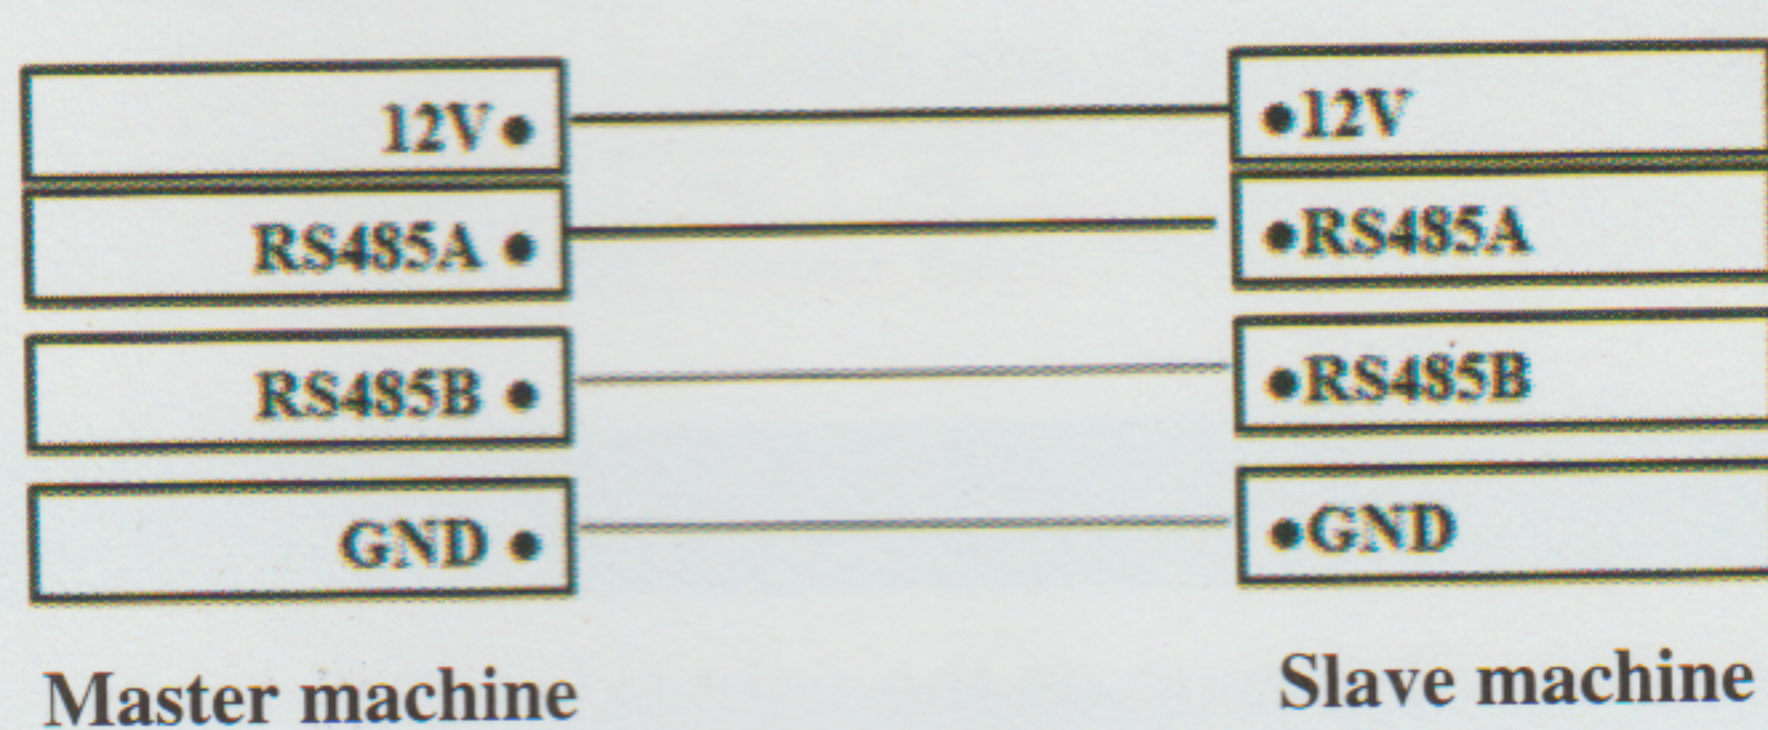


## 13.T9 Input Method

Touch 'Alt' to switch capital/small letter or number, after finished,touch 'Ok' to save it

**How to input punctuation:**when the input method is in capital/small letter state,continuous click '┐' to select what you want to input. The first one is space, the second is dot and so on .

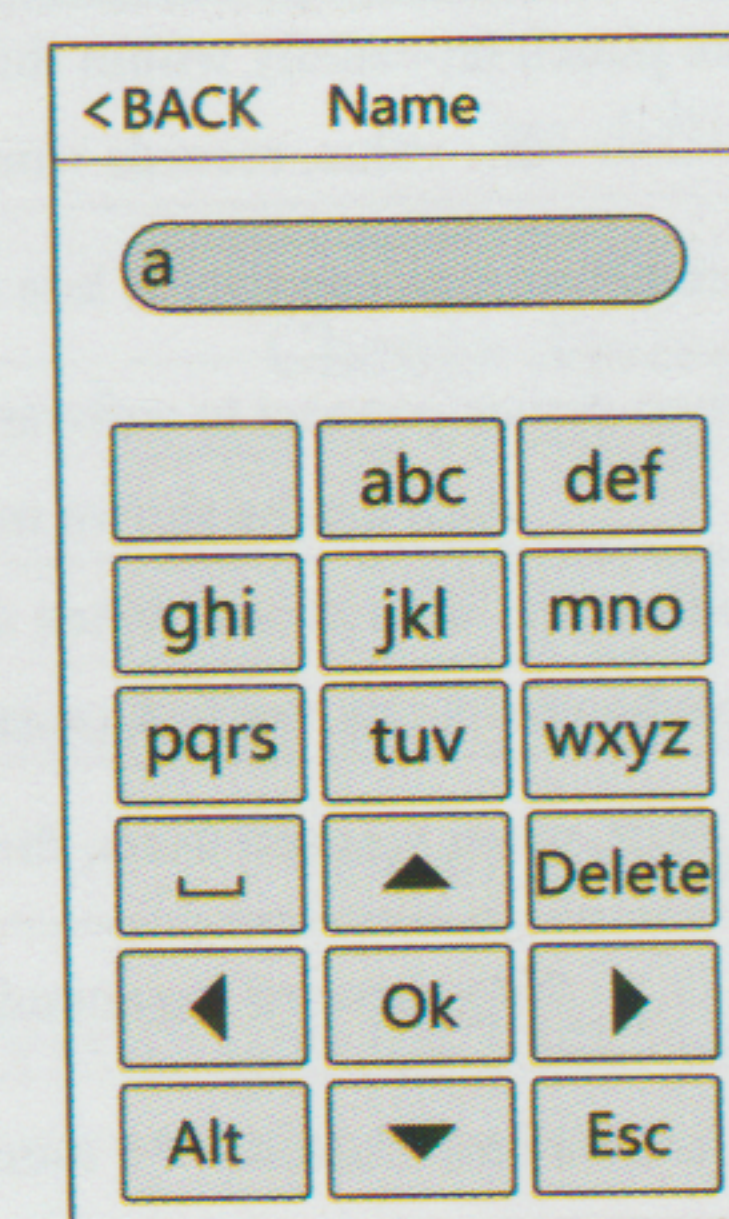

## 4. User Management

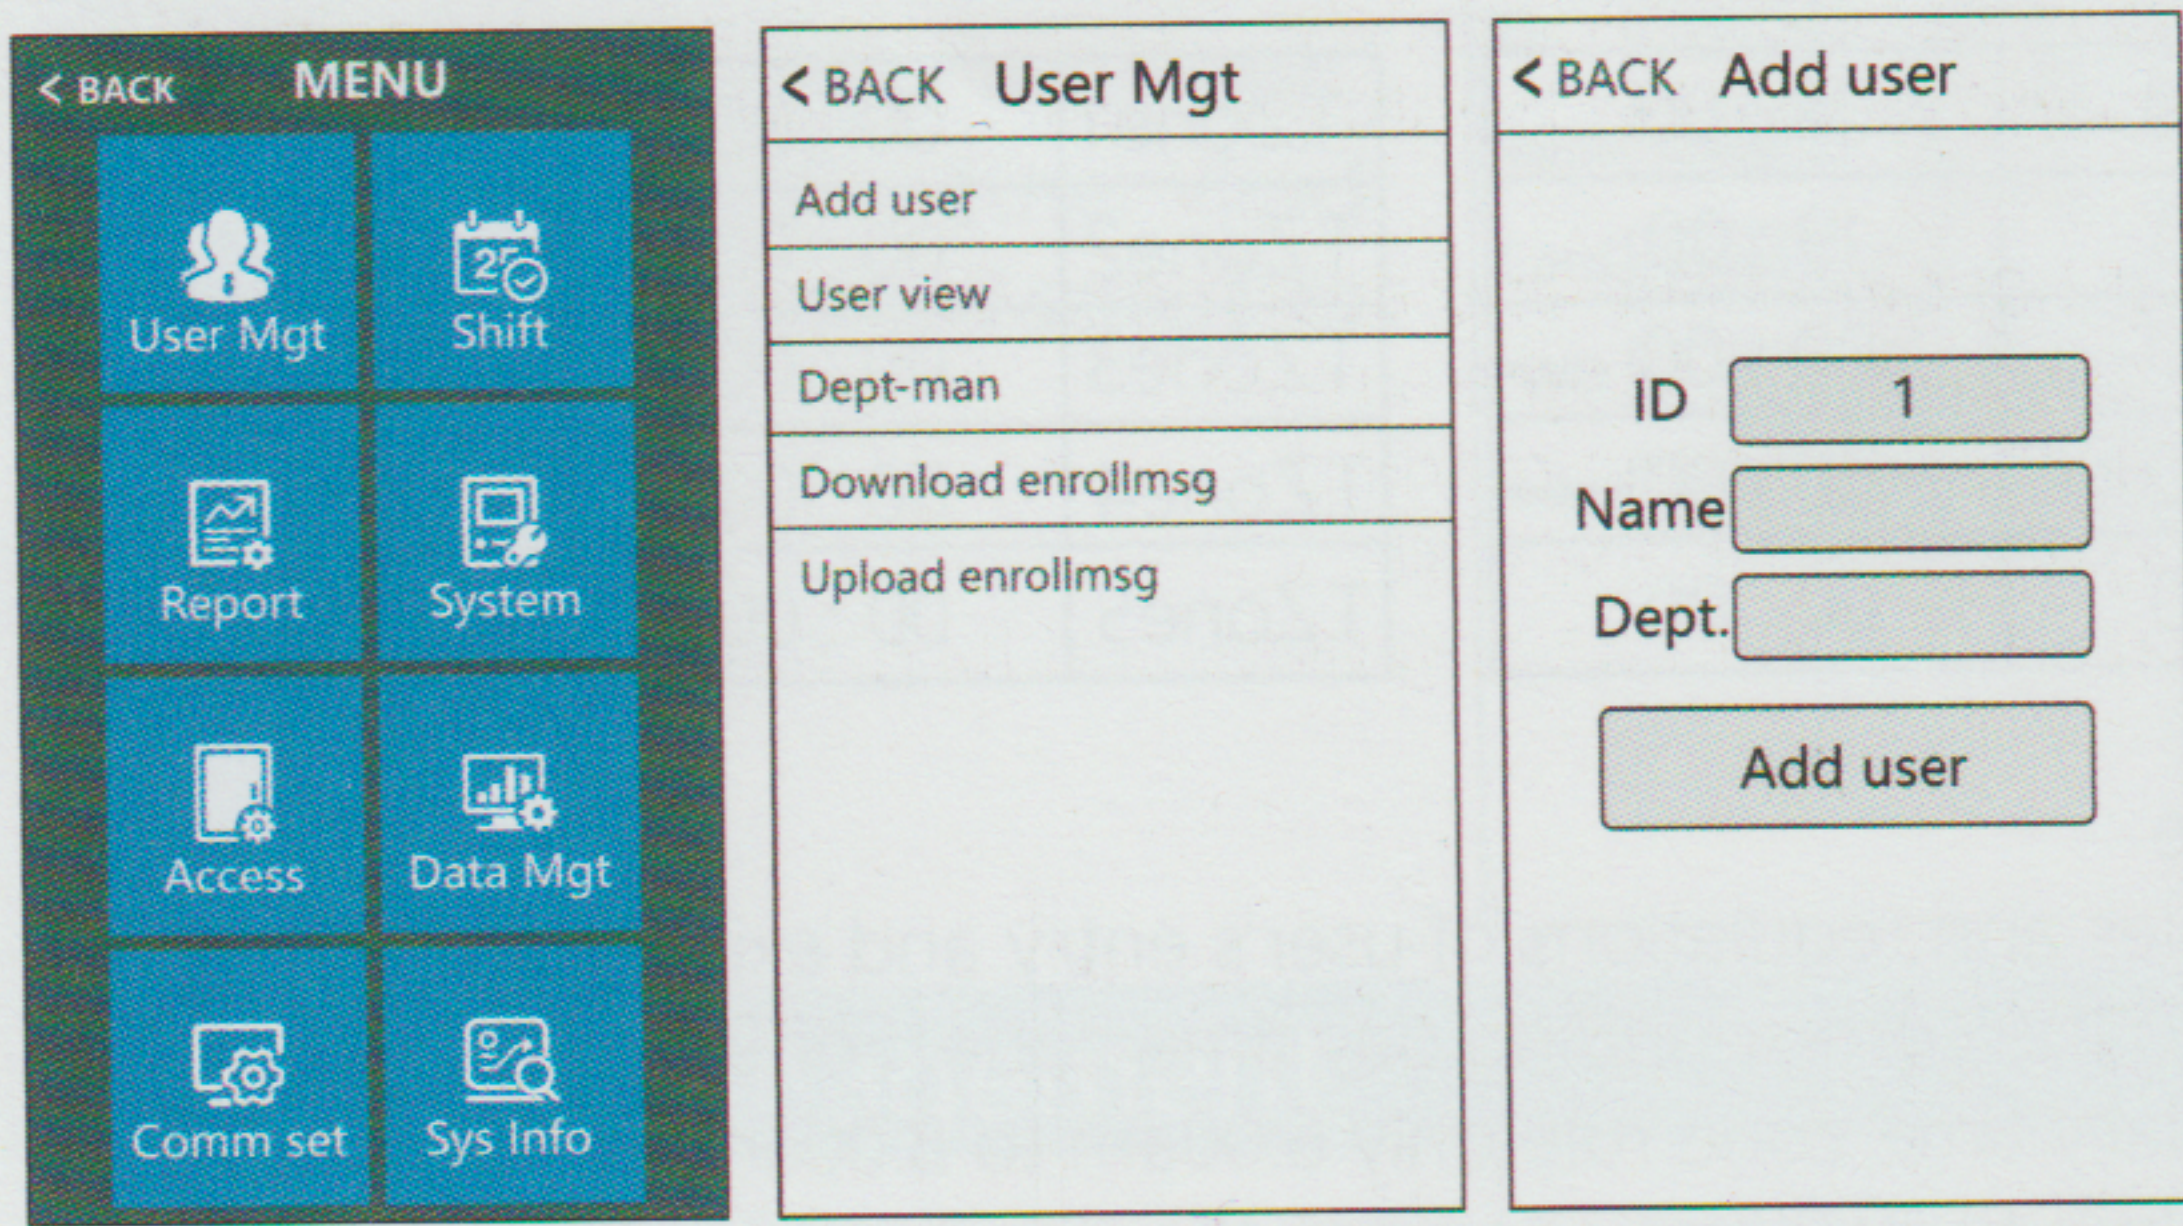

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【User Mgt】** > **【Add user】**, when there is a registered admin, After passing the verification of admin then the menu can be entered

**【ID】** When registering, each user can only have one unique 'ID'.

**【Name】** Input, edit name by T9 input method.

**【Face】** Gaze at the camera to complete the face registration.

Note: Please stand directly in front of the device, face the camera, and keep the entire face displayed in the frame, In order to maintain a good face recognition effect. The following picture is for your reference.



**【Fingerprint】** Press fingerprint three time to finish enrollment. (Optional)

**【Password】** IAn ID can only register one password. After clicking the password icon, enter the password to be set and then press ok to confirm the password again.

**【Password Verification】** Verify password by touching the face recognition area of the screen then click then input ID-click 'OK'-input password-click 'OK'

**【Card】** Each user can only register one card.

3

**【User View】** : You can quickly locate the user you want to edit by **【Find】** or **【Find Name】** at the top of the page. Or slide the screen to search user.

1) Edit user information: Select user you want to edit, you can change any information in this page except 'user ID'

2) Delete user: Select user you want to edit→Delete

3) Advanced setup: Set user shift settings and access control settings on **【Advanced setup】** menu

**【Department】** Set the department that user belongs to

**【Privilege】** User and Admin and Super.user can be selected

**【User】** :If there is Admin in this device, user is not allow to access into menu  
**【Admin】** : The manager of this device. Only admin has permission to access into menu.

**【Super.user】** : Only when there is Admin in device, then can enroll Super.user, but Super.user can only operate part of menu, such as register users

## 5. Download and upload user information

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【User Mgt】** > **【Download enrollmsg】**, insert U-disk in device to download, 3 files will be exported as below:

1、 User data file (AFP\_001.dat): It can be used to synchronized users between devices, and '001' represents device ID

2、 User's enrolled photo(EnrollPhoto)

3、 User information Excel sheet(Staff): Users can edit it in PC then upload back to device, please refer to below picture:

Staff												
ID	Name	Dept.	Shift	Admin	Face	PWD	Card	Lock time zone	GRP	Birthdate	Start:	End:
1	Jenny		0	0		123	3653177	0	0			
2	Sophie		0	0		0	0	0	0			

Fill in personnel information according to the prompt of form header. As for "Shift" item, it is the editing shift number in the time attendance setting. When complete the editing. Directly Click **【Save】**, and save the edited file into U-disk.

After editing shift form, Touch the screen and a menu bar will pop up on the right side of the screen, click > **【User Mgt】**, then insert U-disk, click **【Upload enrollmsg】** and transmit the edited user information to device.

Remark: For Lock Time zone, start time and end time, Pls refer to Chapter 9 Access

4

**Original Record:** You can check all users' attendance records in the sheet. Pls refer to below picture:

Original record																															
Date:2019-8-1~2019-8-31																															
ID:1	Name:Lucas	Dept.:Office	Shift:Day Shift																												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25

**Schedule:** Attendance machine can automatically analysis the clock-in and clock-out data, and transmit these data in EXCEL file to the U disk. Format as below: (Remark: Red text indicates that the attendance is abnormal, such as late, early leave. Blue means overtime)

schedule													
ID:1	Name:Lucas												
Dept.:Office	Shift:Day Shift											Date:2019-8-1~2019-8-31	
Date	week	Sec1		Sec2		Sec3		Work hours		OT hours	Late minutes	Leave minutes	
		IN	OUT	IN	OUT	IN	OUT	Normal	Actual				
8-1	THU	08:25	12:03	13:26	18:06	18:06		8	8	0	0	0	

**Summary Report:** It is a Statistics display of employee attendance for one month

Summary Report												
Date: 2019-8-1~2019-8-31												
ID	Name	Dept.	Work hours		Late minutes		Leave minutes		OT hours		Work Dates(Normal/Actual)	Truancy
			Normal	Actual	TIMES	Minutes	TIMES	Minutes	Normal	Actual		
1	Lucas	Office	248.0	248					77.5		31.0/31.0	0

## 8. System settings

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【System】**

### 1. Device Setup

Item	Meaning
Time	Set device time
Time fmt	24H and 12H format can be selected
Date fmt	Select different date format
Language	Change device displayed language
Voice	Set the volume of speaker
Screen Idle	How long does it take to enter screen saver when the main Interface is not operating
bio-assay	Verify that the user is a live person instead of photo.

### 2. Advanced setup


Item	Meaning
Max Admin	Set the maximum number of device admin
Verify Mode	FA/C/P No matter what kind of verification method can be verified
	Others Need to verify two verification methods together
Visitor QRCode	Whether enable scanning QRcode function or not. Connect device to our cloud software and generate QRcode then verify it in device
1:N Identify	Set the threshold of face recognition
Live threshold	When enable 'bio-assay', the threshold of face recognition
Testing	Check whether the camera is normal
Firmware upgrade	Insert U-disk (FAT32 format) to do device firmware upgrade

# AI Dynamic Face Recognition Terminal quick guide

Version: V10.26.4

## 1.Appearance Display


(The appearance may have some difference, The pictures are just for your reference)

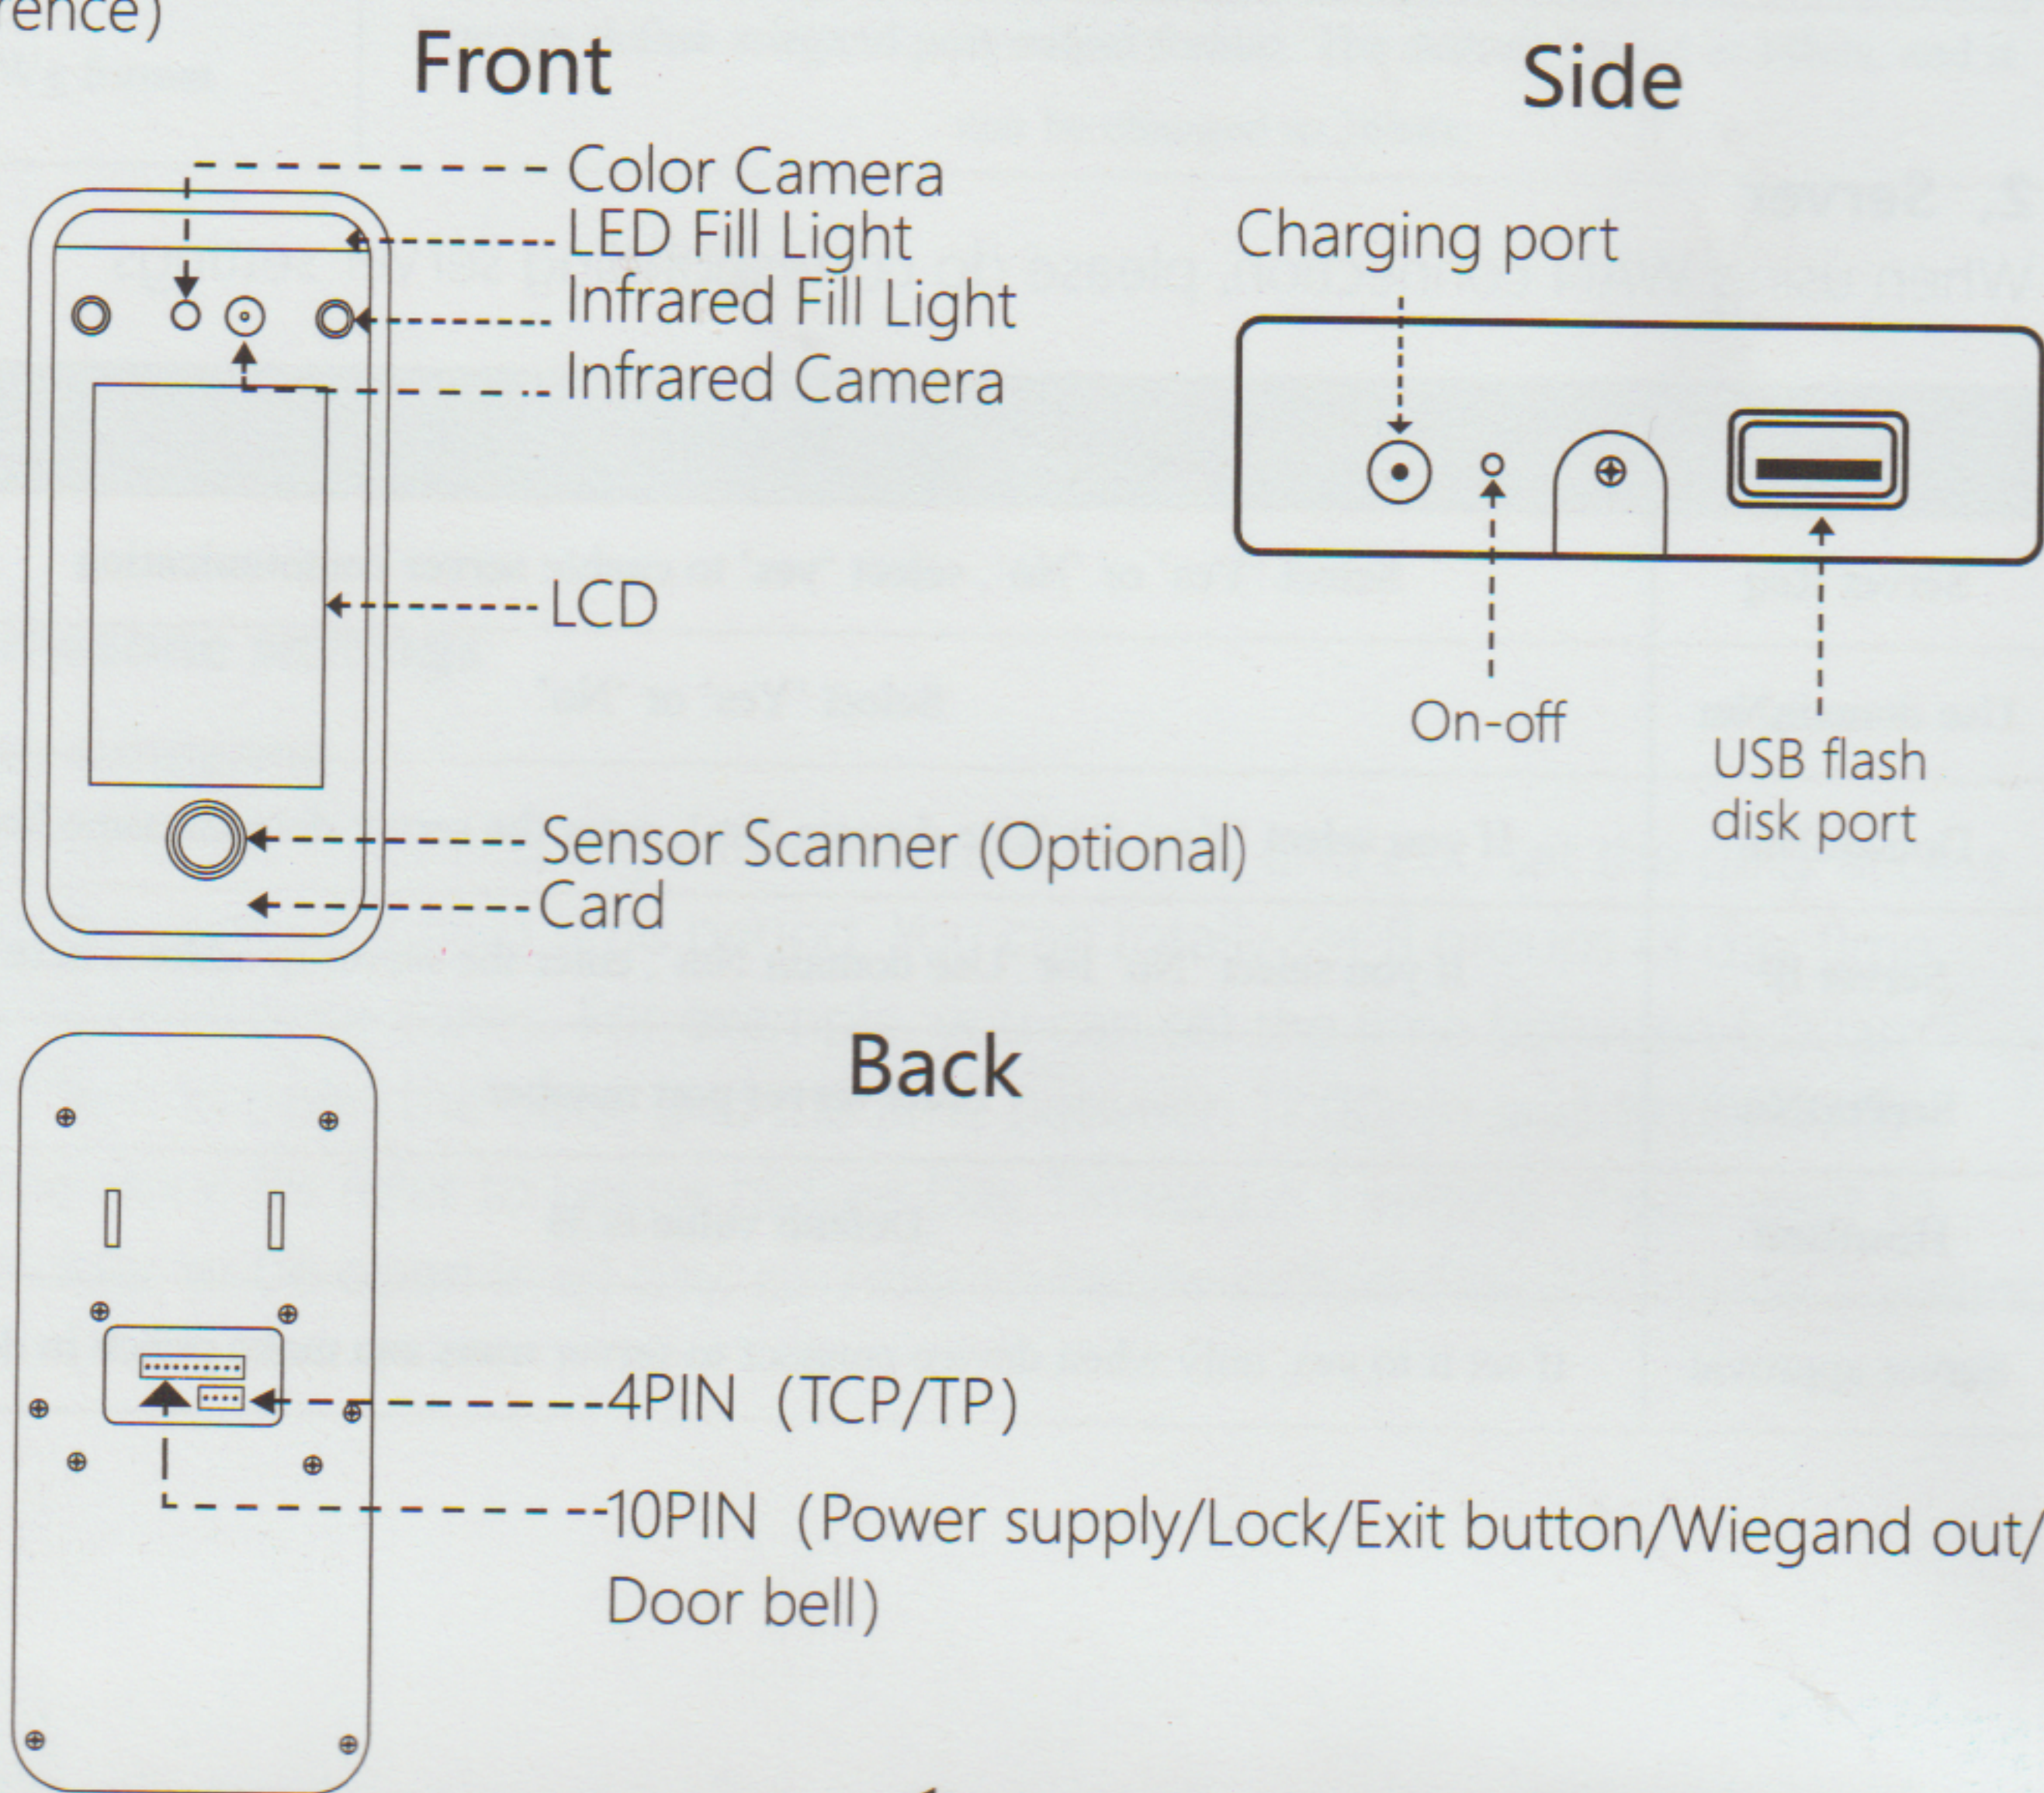

1

## 2.Wall Mount Installation

- 1) The recommended installation location is 130cm from the lowest point of the device to the ground (a suitable height can be identified according to the actual situation).
- 2) Disassemble rear hanging plate and attach it to the wall to select the suitable installation position, then make a mark.
- 3) Drilling on wall according to the marked position.
- 4) Fix the rear hanging plate on the wall.
- 5) Install the device on the rear hanging plate and fix it, then power it up.

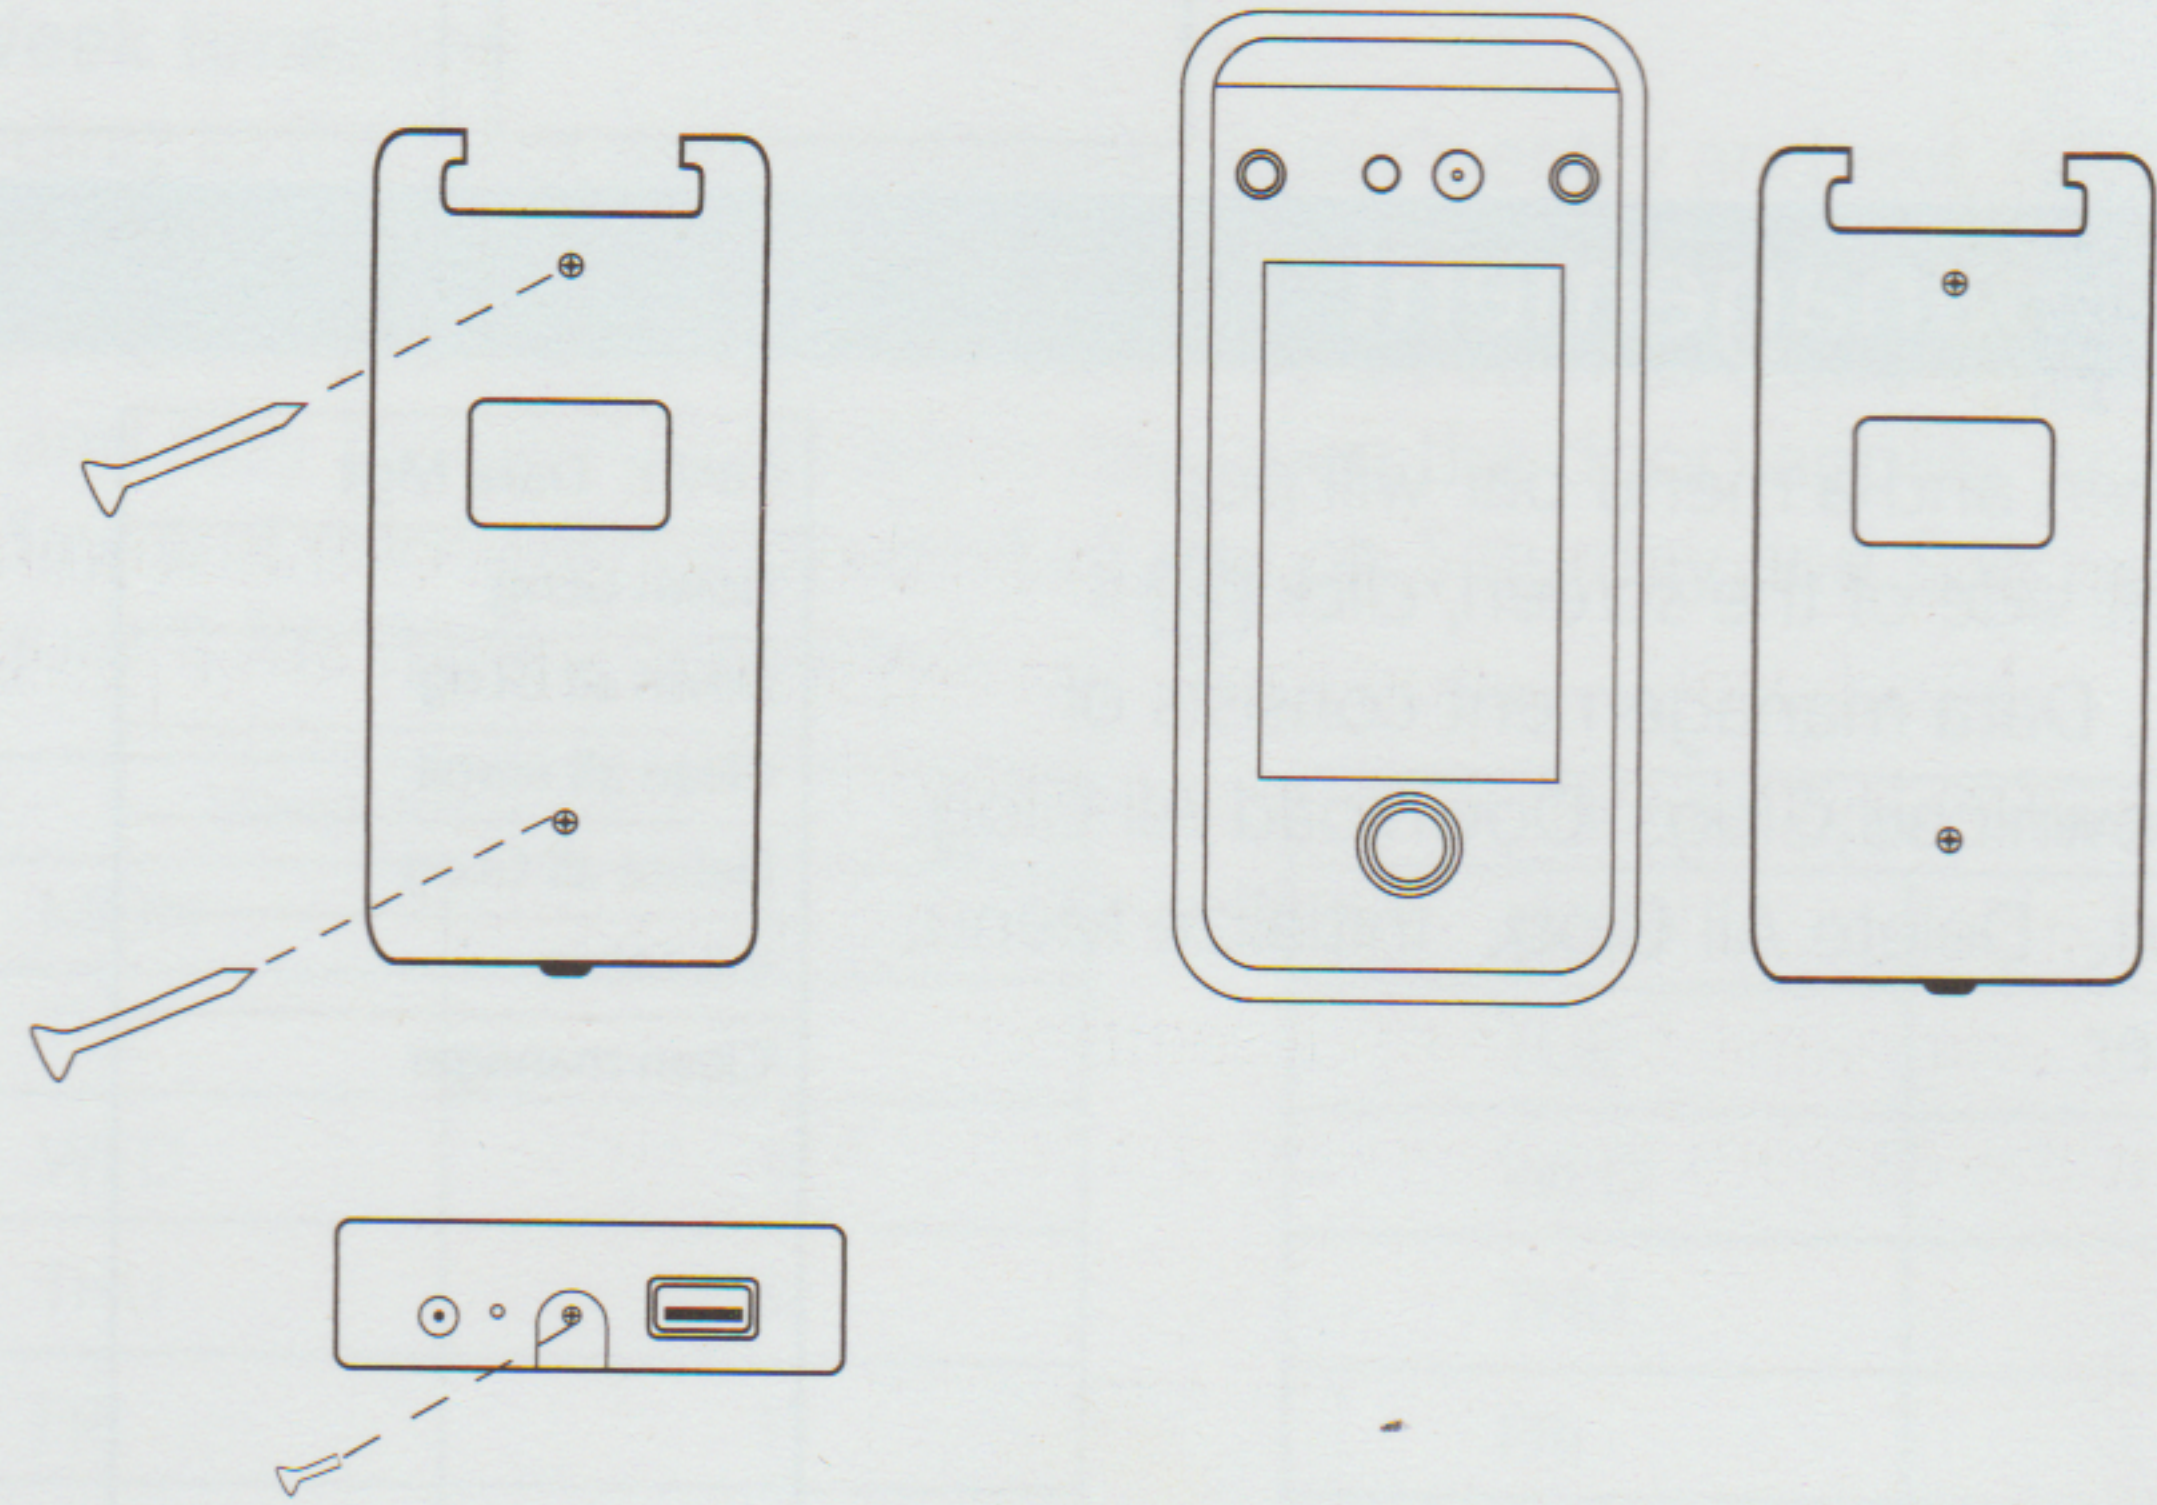

## 3.Attention

- 1) Do not operate with power during installation.
- 2) When connecting electric lock, 12V/2A power supply is recommended.
- 3) Do not install the device in direct sunlight or in a humid place.
- 4) Please read the wiring diagram of access control, and wire it according to the rules strictly.
- 5) On the situation that static electricity is a bit heavy, please connect ground wire first and then connect other wires, which can protect the device from damaging in static electricity.

2

## 6.Time Attendance Management

This chapter is used for setting shifts and attendance rules

### 1. Attendance Rule

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【Shift】** > **【Atten rules】**

Item	Meaning
Re verify	Check if users make punch repeatedly within this range, if records interval is less than this value, records won't be stored
Log Warning	When rest available storage capacity is less than this value, device will alarm
Save Photo	If select 'Yes', when device connect to software, captured photo when users verify face can be shown in software
Stranger Photo	If select 'Yes', and enable 'save photo', when device connect to software, captured photo when strangers verify face can be shown in software
Default Shift	Set default shift, when you add users, they will apply this default shift
Excel Pwd	Set password for attendance report
Late time	When user's late arrival time exceeds *** mins, then it is counted as late arrival.
Lea time	When user's early leave time exceeds *** mins, then it is counted as early leave.

### 2. Edit Shift

**【Download Shift】** : Touch the screen and a menu bar will pop up on the right side of the screen, click > **【Shift】** > **【Atten rules】**, then insert U-disk. Click **【Download Shift】**, then you can download shift arrangement in excel form, Also you can edit the form on PC. Pls refer to below picture:

Shift											
Note: A, shift name: up to 48 words. B. Section type: 0: normal attendance.1: overtime. C. cut off time: if the punch before the cut off time ,it will calculate as the previous day											
NO.	Name	Sec1			Sec2			Sec3			Cutofftime:
		IN	OUT	Sec_1 type	IN	OUT	Sec_1 type	IN	OUT	Sec_1 type	
1	Day Shift	08:30	12:00	0	13:30	18:00	0	18:30	21:00	1	00:00
2	Night Shift	22:00	06:00	0							07:00

Edit shift arrangement according to the prompts of form header. Maximum 8 shifts can be set. Click **【Save】** after editing and save the file into U-disk.

5

## 7.Report

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【Report】**, Insert U-disk, and input the start and end time that you need to check. Click "OK" to download the report. The report includes original record sheet(Original Record), attendance list(Schedule)and summary sheet (Summary Report).

6